

Condition Monitoring

In "condition monitoring "page user gives the values by following the below mentioned steps -



a. Add Condition Monitoring Register

- Click on Condition monitoring side menu and select "Condition monitoring Register" navigation menu.
- " Condition monitoring list "Page is displayed.

Condition Monitoring Register List		
Note : If User Wants To View/Add Condition Monitoring Register Data,Please Click On Required Register In Below List.		
S.No	Name	Type
1	TEMP1	Equipment

- Click on "Name" Link to update the condition monitoring register.
- " Managing Condition monitoring Register " Page is displayed

Managing Condition Monitoring Register

Loco From Date To Date

--All--

- Select Loco number and enter From date ,To date .
- Click on Go option.
- View Temp1 page displays in a tabular column.

View TEMP1

[Add TEMP1](#)

Loco From Date To Date

--All--

- Click on Add Temp1 link .
- Select Available in and entry type from drop down menu.
- Click on Add option.

Add TEMP1

Note :Must enter date in 'dd/mm/yyyy' format

Available In	Loco	Eq.Position	Entry Type	
<input type="text" value="Loco"/>	<input type="text" value="31123"/>	<input type="text" value="--Select--"/>	<input type="text" value="Vertical"/>	<input type="button" value="Add"/>

- Select Available in from drop down menu.
- Select Loco under Available drop down menu.
- Enter all the details and click on save option.

Add TEMP1

Note :Must enter date in 'dd/mm/yyyy' format

Available In	Loco	Eq.Position	Entry Type	
<input type="text" value="Loco"/>	<input type="text" value="30219"/>	<input type="text" value="2"/>	<input type="text" value="Vertical"/>	<input type="button" value="Add"/>

Date	<input type="text" value="02/09/2022"/>
1	<input type="text" value="2.5"/>
2	<input type="text" value="3.2"/>
Schedule	<input type="text" value="IB"/>

- Select Shop floor from dropdown.
- Enter all the details and click on save option.

Add TEMP1

Note : Must enter date in 'dd/mm/yyyy' format

Available In	Eq.Number	Make	Entry Type	
Shop Floor ▾	<input type="text"/>	AAL ▾	Vertical ▾	<input type="button" value="Add"/>

Date	<input type="text" value="05/09/2022"/>
1	<input type="text" value="15"/>
2	<input type="text" value="15"/>
Schedule	<input type="text" value="IC"/>

b. View Condition Monitoring Register:



- In "Managing condition monitoring Register "
- Click on button to view the condition monitoring Register in the form of a tabular format.

Condition Monitoring Register List		
Note : If User Wants To View/Add Condition Monitoring Register Data,Please Click On Required Register In Below List.		
S.No	Name	Type
1	TEMP1	Equipment
2	gear_case	Locos

- Click on button to save the details, successful message is received.

c. Delete Condition Monitoring Templates:


- Click on Condition monitoring side menu and select "Condition monitoring Register" navigation menu.


- " Condition monitoring list " Page is displayed.
- Click on Name link and click on Go option.
- In "Managing condition monitoring Register"
- Click on  button to view the condition monitoring Register in the form of a tabular format.
- Click on  button in "View condition monitoring register list " Page to delete the records.

View gear case
[Add gear case](#)

Loco From Date To Date
 --All-- 05/09/2022

Showing 1 Record(s) Out of

Delete	S.No	Date	ID	Loco	Schedule	Ab.no:1	Ab.no:2
	1	08/07/2022	1	31120	IC	50	50

- Confirmation message is displayed, click on  button to delete the record.