

## Loco Lifting Register

Given provision for PPIO to update or correct the key parameters of the loco under 'corrections' main menu.

- Click on Loco lifting Register under Correction Menu.
- Managing Loco Lifting page displays

Managing Loco Lifting Register

Loco Kind	Loco	Schedule	Purpose	Causes	Status	From	To	
--All--	30336	--All--	--All--	--All--	--All--		30/08/2022	Go

- Select all the details from drop down menu and click on Go option.

Managing Loco Lifting Register

Loco Kind	Loco	Schedule	Purpose	Causes	Status	From	To	
--All--	30336	--All--	--All--	--All--	--All--		30/08/2022	Go

Showing 1 Record(s) Out of 1

S.No	Loco	Schedule Purpose	HLB Placed On	Disconnected On	Disconnected By	Lifted On	Lifted By	Lowered On	Lowered By	Connected On	Connected By	Lifting Cause	Delete
1	<a href="#">30336</a>	IC	03/03/2017 10:38	03/03/2017 12:00	A S Yadav	03/03/2017 12:00	Dushant Kumar.tyagi	04/03/2017 06:50	Dushant Kumar.tyagi	04/03/2017 09:00	A S Yadav	Abnormal Sound	

- Click on Delete symbol to delete the record of lifting register.
- Click on Loco number link to update the Loco Lifting register details.

Update Loco Lifting Register

Loco	30336	Section	M4HR
Schedule	IC	Equipment	CBC SCREW COUPI
Placed in HLB On	03/03/2017 10:38	Lifting Cause	Abnormal Sound
Disconnected On	03/03/2017 12:00	Disconnected By	--Select--
Lifted On	03/03/2017 12:00	Lifted By	Dushant Kumar.tye
Lowered On	04/03/2017 06:50	Lowered By	Dushant Kumar.tye
Connected On	04/03/2017 09:00	Connected By	--Select--
Purpose	--Select--		
Repairs Attended	ATTENDED.		
Lifting Not Required	<input type="checkbox"/>		

Save Back

- Enter all the details and click on save option.