

Loco Lifting Register

This page gives the information about the loco lifting details. Application allows the user to Add and View Loco lifting Register with the details as Loco kind, Loco, Schedule, Purpose, Causes, Status, from & To date for the purpose of schedule attention.

a. Add Loco Lifting Register:

- Click on "Locos" side menu and select "Loco Lifting Register" navigation menu.
- "Managing Loco Lifting Register" page is shown with "[Add Loco Lifting Register](#)" link.

- Click on "[Add Loco Lifting Register](#)" link, user is navigated to "Add Loco Lifting Register" page.
- Fill in all the mandatory fields such as Loco, Schedule, Placed in HLB on date, Lifting cause and Remarks.
- Click on **Save** button, user receives the message as "Saved successfully".

Add Loco Lifting Register -

Note: User can select either All or Under Maintenance or Foreign locos by clicking on the radio button beside each option respectively while adding the Loco lifting register.

b. View Loco Lifting Register:

- Loco Lifting Register details are shown in "Managing Loco Lifting Register" page.
- Entering the Loco number, From date and To date. On clicking **Go** button, the details are displayed in a tabular format.

Managing Loco Lifting Register

[Add Loco Lifting Register](#)

Loco Kind: --All-- Loco: --All-- Schedule: --All-- Purpose: --All-- Causes: --All-- Status: --All-- From: 30/08/2022 To: **Go**

Showing 4 Record(s) Out of 4

S.No	Loco	Schedule	Purpose	HLB Placed On	Disconnected On	Disconnected By	Lifted On	Lifted By	Lowered On	Lowered By	Connected On	Connected By	Delete
1	31236	IB		27/08/2022 07:00	--		--		--		--		
2	30659	UnSch		06/08/2022 08:27	--		--		--		--		
3	32643	IB		06/08/2022 08:21	--		--		--		--		
4	30238	IA	Scheduled	26/07/2021 17:14	01/08/2022 17:14	ELSLGDAdmin	23/08/2022 17:15	Abhishek Kumar	--	Abhishek Kumar	--		

Managing Loco Lifting Register -

c. Update Loco Lifting Register:

- To update the previously saved records, click on the Loco Link "Managing Loco Lifting Register" page.
- After updating the required information, click on **Save** button, to save the details.
- Successful message is received and the information is updated.

Update Loco Lifting Register

Select From: All Under Maintenance Foreign

Loco	<input type="text" value="30287"/>	Section	<input type="text" value="M6"/>
Schedule	<input type="text" value="IA"/>	Equipment	<input type="text" value="BGF-G9"/>
Placed in HLB On	<input type="text" value="26/09/2022 11:18"/>	Lifting Cause	<input type="text" value="Bogie Frame"/>
Disconnected On	<input type="text" value="27/09/2022 11:23"/>	Disconnected By	<input type="text" value="--Select--"/>
Lifted On	<input type="text" value="27/09/2022 11:23"/>	Lifted By	<input type="text" value="--Select--"/>
Lowered On	<input type="text"/>	Lowered By	<input type="text" value="--Select--"/>
Connected On	<input type="text"/>	Connected By	<input type="text" value="--Select--"/>
Purpose	<input type="text" value="Schedule"/>		
Repairs Attended	<input type="text" value="Loco lifted on 27/09/2022."/>		
Lifting Not Required	<input type="checkbox"/>		

Update Loco Lifting Register -