

Locos

In this module user can allow to update all the details of the locos.

Locos ▾

Loco Transfer Diesel Sheds

Add Loco History

Find a Loco

Loco Condemn

Loco History

Loco History (NEW)

Loco Lifting Register

1. Loco Transfer Diesel Shed:

Loco transferring in diesel sheds can be done using this module.

- Click on Loco transfer diesel sheds menu under Locos side menu.
- Transfer Locos to Diesel shed page displays.

Transfer Locos to Diesel Sheds

Loco To Transfer

- Enter Loco number and click on Go option.

Transfer Locos to Diesel Sheds

Loco To Transfer

Loco Details	
Loco:	37084
DoC:	01/05/2019
Loco Type:	WAP7
Home Shed:	LGD
Transfer To	<input type="text" value="BKSC(D)"/>
Transfer Date:	<input type="text" value="28/09/2022 12:37"/> <input type="button" value="📅"/>
Letter	<input type="button" value="Choose File"/> Notes.pdf
Remarks	<input style="width: 100%;" type="text" value="Transfer to BKSC."/>
<input checked="" type="checkbox"/> I certify that the information filled above is true	
<input type="button" value="Save"/>	

- Enter all the details and select the required data from drop down menu.
- Click on save option.