

Loco Inward

To Receive Loco for a Maintenance

Movement Register ▾

Change Running Schedule

Loco Inward

Loco Outward

Locos In Shed

Meter Readings

- Select Movement Register menu from Main Screen.
- Select Loco Inward Sub menu from Movement Register menu.
- Loco Inward page is displayed.
- Enter basic data like Loco Shed, Loco Number, Purpose, Received By, Previous Visit Info, Arrival Condition, Failure Info, Inward Time, Present Meter Readings and Remarks.

Movement Register -navigation menu

Note: When Loco comes to shed for Schedule/Unscheduled maintenance/Traffic Spare/General checkup, Register loco as Inward, it could be Home or Foreign.

Loco Inward

Select Loco Shed Home Foreign

Loco:

Type	Select	Schedule	Due	Revised
Sch	<input type="radio"/>	IT-Minor	09/08/2022	18/10/2022
Un Sch	<input type="radio"/>	UnSch		
	<input type="radio"/>	TS		
	<input type="radio"/>	GC		
Out Station	<input type="radio"/>	OR		

Received Through: Direct Inform to TLC

TLC Remarks : --

Previous Visit Info: Purpose: TOH
 Inward On: 17/08/2022 00:30
 Outward On: 03/09/2022 05:00

Arrival Condition Working Partially working LE Dead

Failure Info: Nil

Inward On:

Meter	Present Inward	Last Outward
Energy(KWH)	<input type="text" value="0"/>	<input type="text" value="0"/>
Regeneration(KWH)	<input type="text" value="0"/>	<input type="text" value="0"/>
SPM(KM)	<input type="text" value="0"/>	<input type="text" value="0"/>

Inward Remarks:

Note: Completed-Green,Skipped-Red,Additional Sch-YellowGreen

S.No	Sch	Kind	Sch_Seq	Days	Comp_On
1	ICD	Minor	0	0	27/07/2019
2	IT	Minor	0	45	11/10/2019
3	IA	Minor	0	90	16/10/2019
4	IT	Minor	0	135	29/12/2019
5	IB	Minor	0	180	31/12/2019
6	IT	Minor	0	225	18/03/2020
7	IC	Minor	0	270	20/03/2020
8	IT	Minor	0	315	28/06/2020
9	IA	Minor	0	360	30/06/2020
10	IT	Minor	0	405	04/10/2020
11	IB	Minor	0	450	06/10/2020
12	IT	Minor	0	495	07/12/2020
13	IC	Minor	0	540	09/02/2021
14	IT	Minor	0	585	16/04/2021
15	IA	Minor	0	630	04/06/2021
16	IT	Minor	0	675	10/09/2021
17	IB	Minor	0	720	17/09/2021
18	IT	Minor	0	765	06/12/2021
19	IC	Minor	0	810	07/12/2021
20	IT	Minor	0	855	19/02/2022
21	IA	Minor	0	900	20/02/2022
22	IT	Minor	0	945	01/05/2022
23	IB	Minor	0	990	05/05/2022
24	IT	Minor	0	1035	17/08/2022
25	TOH	Major	0	1080	03/09/2022
26	IT	Minor	0	1125	

Loco Inward

- Select Loco Shed Type as Home or Foreign.

Home – Current Location loco Shed

Foreign – Other than Home Shed

Loco may visit/come to Shed with various purposes like in below table:

Maintenance Type	Schedule	Purpose Description	Available options	Remarks
Schedule	IA-Minor	Planned	Current	Loco comes for scheduled maintenance. If needed current schedule can be skipped.
	IB-Minor			
	IC-Minor			
	IOH-Major			
	POH-Major			
	TOH-Major			
	AOH -Major			
Un Schedule	Unsch	Un schedule	Select any One Radio Button in Unsch Purpose Options i.e., 1.Development/Modification 2. Failed / Defect 3. Casual Check-up	Loco comes for an unscheduled maintenance
	TS	Traffic Spare		Temporary stay for Locos
	GC	General Check up		Loco comes for a general check-up.
Out Station	OR			When a loco is on track some failure occurred than nearby loco shed person goes to check the repair of that loco than we call as Outstation repair


- Select the purpose for loco visit.
- “Received Through” value, by default is “Direct”. Inform to TLC check box option helps that loco inward information directly appears in TLC loco movement.

a. Loco Inward:

Here any schedule irrespective of the pre-defined order can be taken for a particular loco

If "Inform To TLC" check box is checked that Loco Inward Information will appear in TLC Loco Movement where user can update the information if required.

Once the Outward is done at ELS location Loco status will change to "Under TLC Attention" in Loco Master until the Outward is done at TLC. Once Outward is done at TLC then status will change to "In Use".

- Arrival condition by default system selects "Working". Any other condition PPIO user must select any one of the below failures option.
 1. Partially working
 2. LE (Light Engine)
 3. Dead
- On "failure option" selection, Line failure link appears. To fill the failure details, click on the link.
- "Inward on" by default system fills the current date. If needed, system allows to change it to any previous date.
- Fill 'Readings details' and 'Inward remarks.'
- On right side of the page Loco Schedule details are shown in a tabular format with color codes. For Color Legend details refer Loco Inward color legend table.
- Once all the required details are entered click on the  button. "Loco Inward Successful" message displays.
- Once the Loco is taken for inward, it will be automatically added into "Wait for Inspection" status in Loco Schedule Status page.