


Schedule Planning is defined for every Loco before taking it for Inward. Supervisor plans and updates the schedules for the Loco as per the requirement when the Loco is taken for Inward.

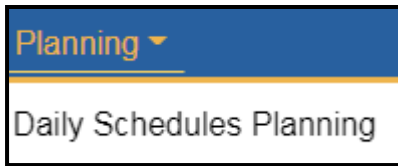

**a. Daily Schedule Planning:**

User plans the Schedule for 6.00:hrs/8.00:hrs/16.00:hrs/22.00:hrs for Today schedule, Schedule Under Progress and Special Repairs in "Daily Schedules Planning" page.

View Daily Schedules Planning Last Updated on: --

ELS BZA

Date: 17/11/2022 Plan:  06:00 Hrs  08:00 Hrs  16:00 Hrs  22:00 Hrs

Holding |  Arrival |  Dispatch |  Ready |  Over Due |  Traffic Spare |  Outage

Today Minor Schedules	Minor Sch.Under Progress	Unsched Repairs	Major Schedule	Line Failures	Locos Under Monitoring	Planning Remarks					
Loco	Sch	Priority	Last Visit	Arrival	FC-06:00	FC-08:00	FC-16:00	FC-22:00	Remarks	Target WT	WT H
<a href="#">22746/BZA</a>	IA	Select	IA-11/07/22	27/10/2022 11:54	--	--	--	--	N	--	<input type="checkbox"/>
<a href="#">22664/BZA</a>	IA	Select	TOH-01/07/22	27/10/2022 11:53	--	--	--	--	N	--	<input type="checkbox"/>
<a href="#">33319/BZA</a>	IA	Select	UnSch-22/10/22	22/10/2022 08:41	27/10/2022 22:00	27/10/2022 22:00	--	27/10/2022 22:00	On arrived coupled with 41252	--	<input type="checkbox"/>
<a href="#">41252/BZA</a>	IB	Select	UnSch-22/10/22	22/10/2022 08:35	--	--	--	--	Arrived in working, along with	--	<input type="checkbox"/>
<a href="#">30605/BZA</a>	IC	Select	UnSch-22/10/22	22/10/2022 06:48	--	--	--	--	on arrival wkg. normal, HOG2 n/wkg.(D/R)	--	<input type="checkbox"/>

- Click on Loco number link to view the data.