

View Loco Wheel Measurements

- Technical sections supervisor shall click on ‘Wheel Measurements’ from ‘Wheel Measurements’ side menu.
- ‘View Wheel Measurements’ screen shall be displayed with the filter options to filter the data.
- The filter options available are
 - Loco
 - Schedule
 - Section
 - Range From and To date
 - From and To date
- On click of ‘Go’, user shall be displayed with the saved data of wheel measurements.
- Following details are displayed in the view grid of ‘View Wheel Measurements’ screen.
 - Loco
 - Date
 - Section
 - Measured By
 - Schedule
 - Remarks

View Wheel Measurements							
Add Wheel Measurements							
Loco	Schedule	Section	Range From	Range To	From	To	
30344						17/08/2022	Go
						Showing 20 Records Out of 39	
S.No	Loco	Date	Reading Purpose	Section	Measured By	Schedule	Delete
1	30344	15/08/2022	Before Turning	TKDAdmin	Adiya	UnSch	
2	30344	18/07/2022	After Turning	M4INSP	Hemant	IB	
3	30344	17/07/2022	Before Turning	M4INSP	Hemant	IB	
4	30344	13/04/2022	Regular CheckUp	M4INSP	Hemant	IA	
5	30344	04/01/2022	After Turning	M4INSP	Hemant	ICO	

b. View Loco Wheel measurements